

PROCEDURE OF UNLOADING IN PEZINOK

1. Stop the car at the weighbridge, turn off the engine, pull the handbrake and come to the registration in the room next to the weighbridge, where you hand over the transportation documents. Check that you have all PPE. If necessary, you can borrow them. In one vehicle there can be max. one driver!



2. After the registration, the driver continues to drive according to traffic signs, meets the max. speed limit 20 km/h and has a seat belt fastened.

3. Stop in front of the reception hall and wait for the operator to open the gates. When moving outside the vehicle, PPE is mandatory. If necessary, ring the bell and wait for service. **It is forbidden to enter the mixing hall without the consent of the operator!**



4. If it is not possible to unload in the reception hall, the operator will ask the driver to unload in the large hall (waste depot). In the hall during unloading, the driver must be in the vehicle, if it is not necessary (manipulation of the vehicle).




5. **Never step on containers!** Use a ladder for manipulation at heights. After unloading the waste, the driver continues to drive according to the traffic signs while meeting the max. permitted speed 20 km/h. The cleaning of the container is possible only in the hall. **Never clean the container/trailer outside!**



6. The driver stops the vehicle on the weighbridge, switches off the engine, pull the handbrake up. Then he goes to the weighing system in the admin building, makes the second weighing and takes the signed and stamped transport documents.

7. We wish you safe ride !

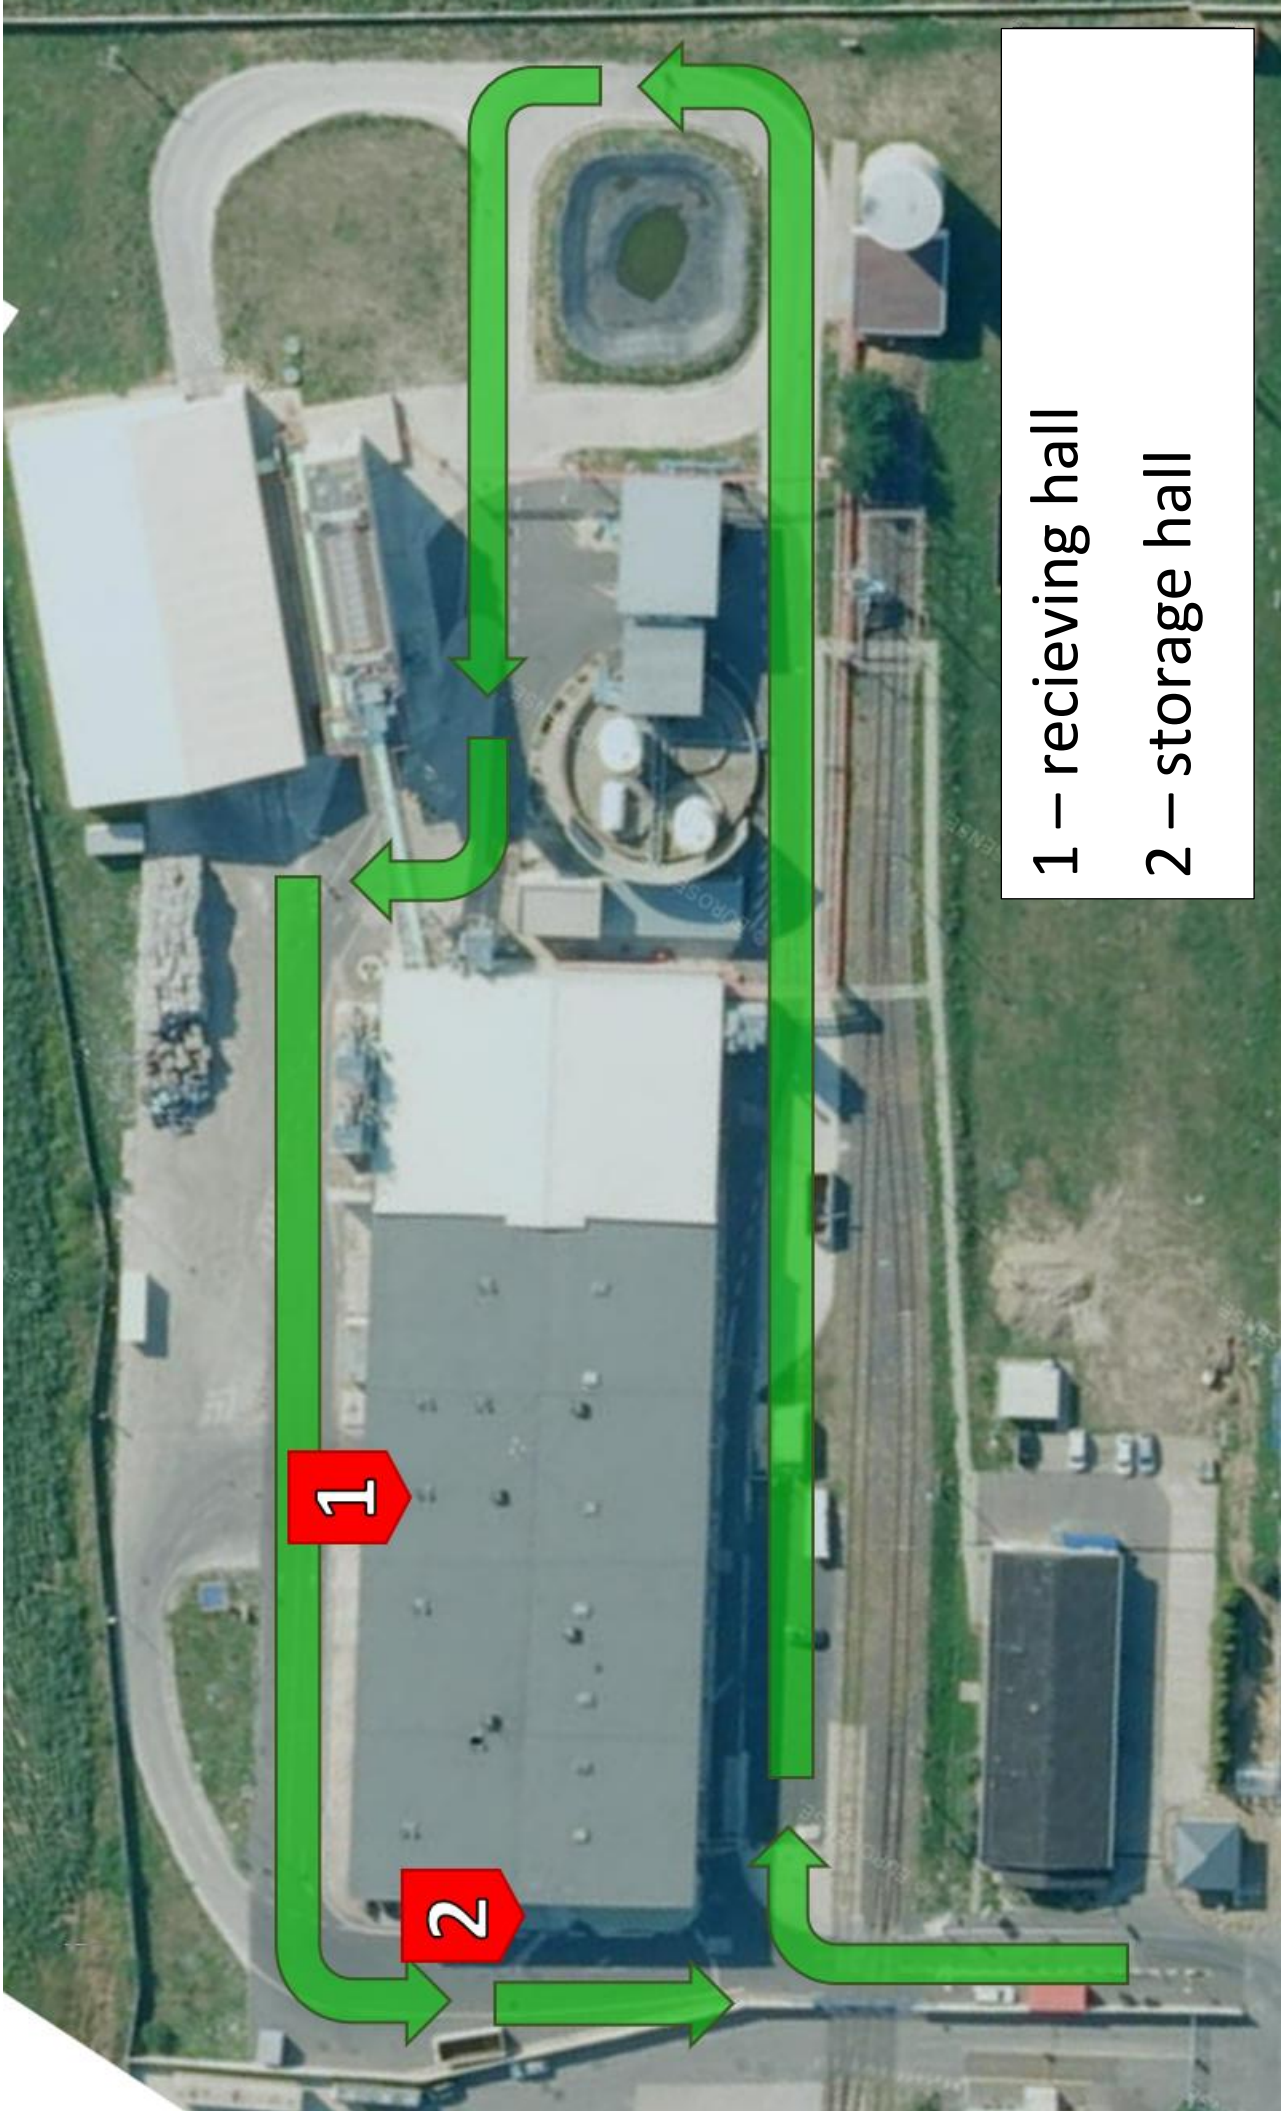

- 1 – receiving hall
- 2 – storage hall